

Section 2

90° Corner Assembly

Inside c-channels are only fastened at interior facing corners for a minimum of 8ft

All outside c-channels must be secured to footing every 3ft

INTERIOR OF STRUCTURE

Overlap c-channel by 1" to 2"

INSIDE CORNER VIEW

OUTSIDE CORNER VIEW





Lower C-Channel Mounting

ThermoForm


TF Forming Systems, Inc
800-360-4634
www.TFSystem.com

Date: 9/10/2013

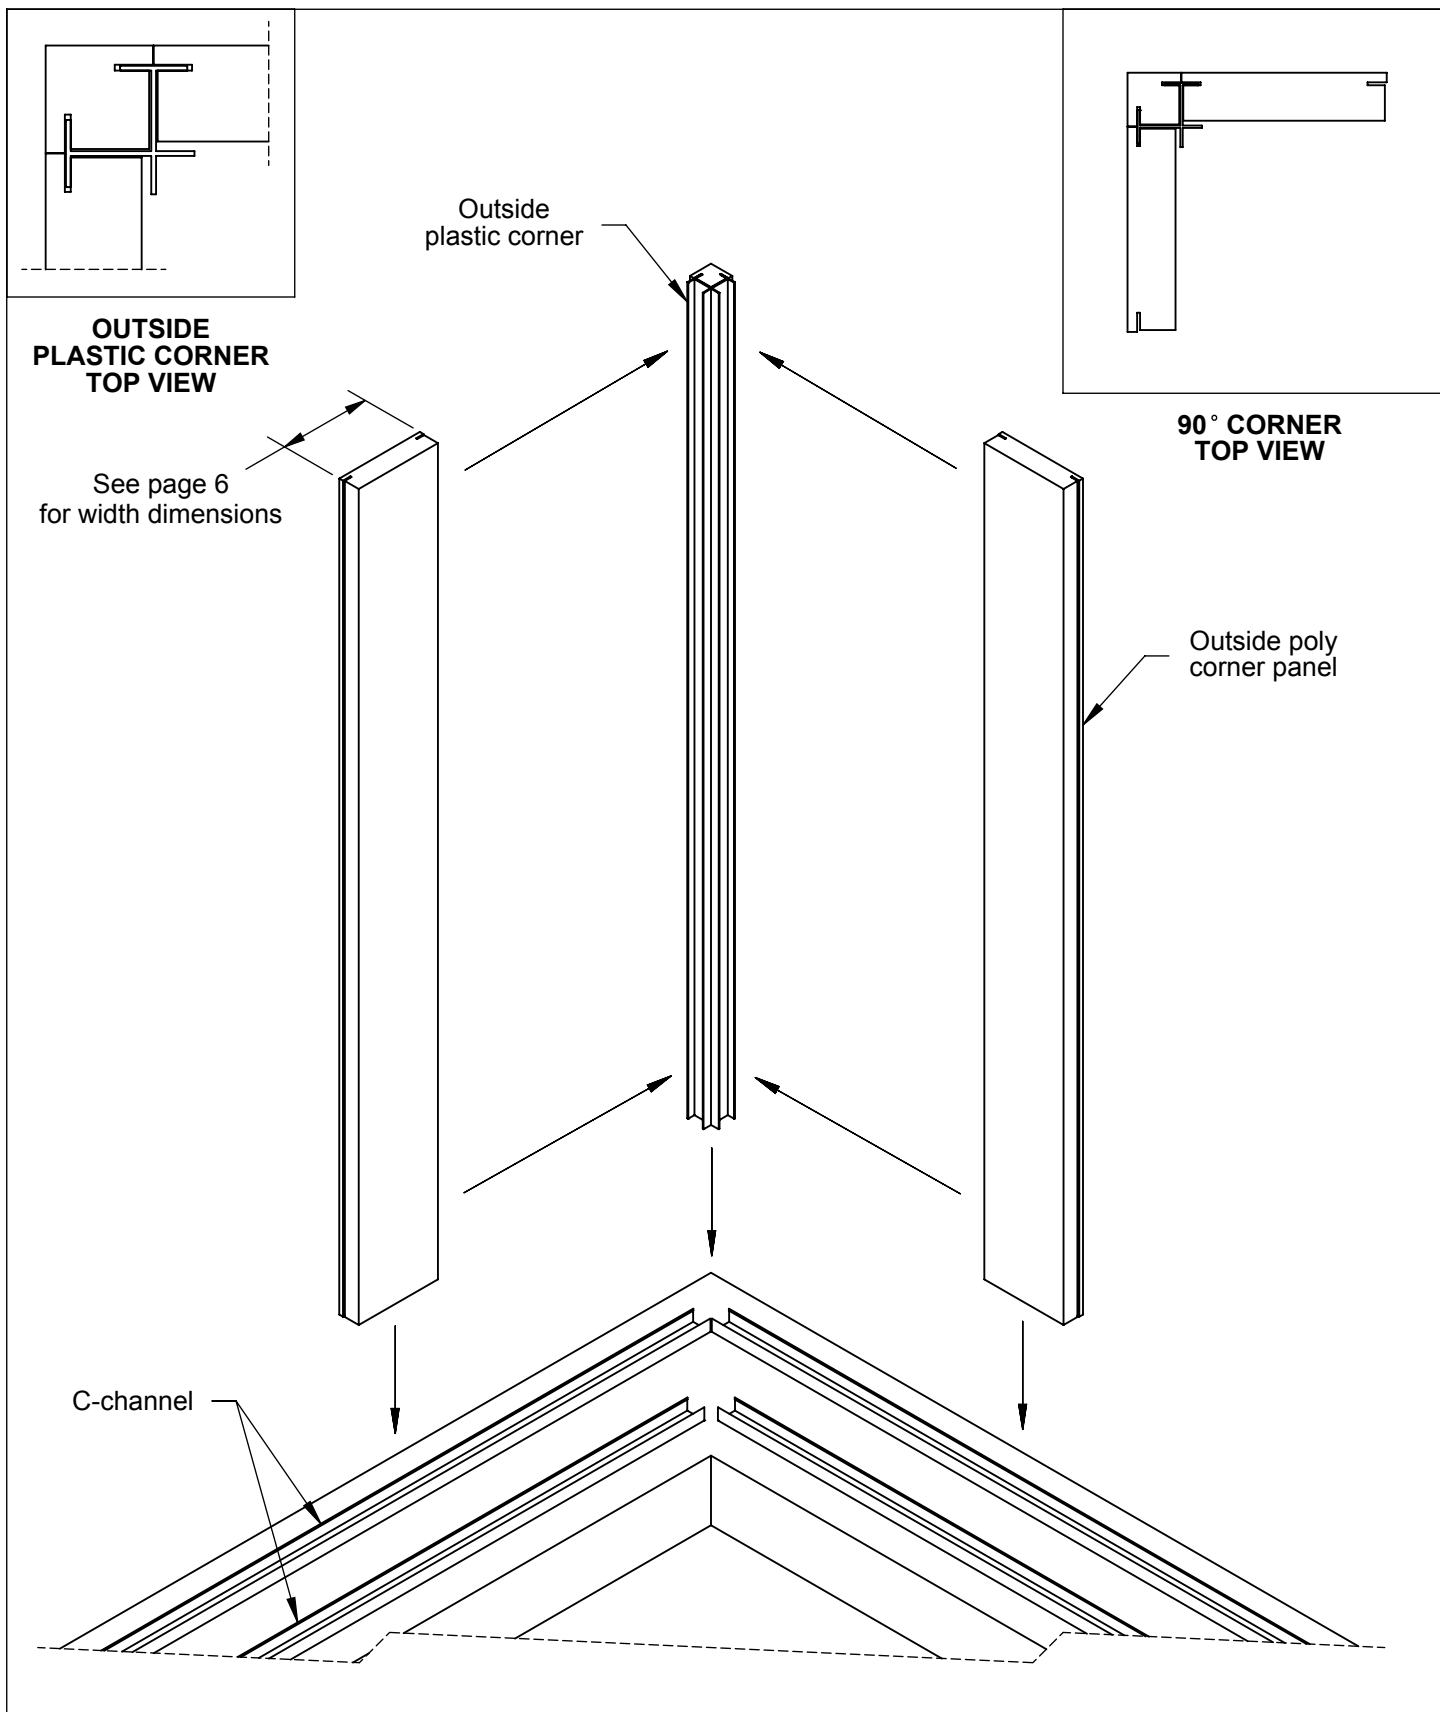


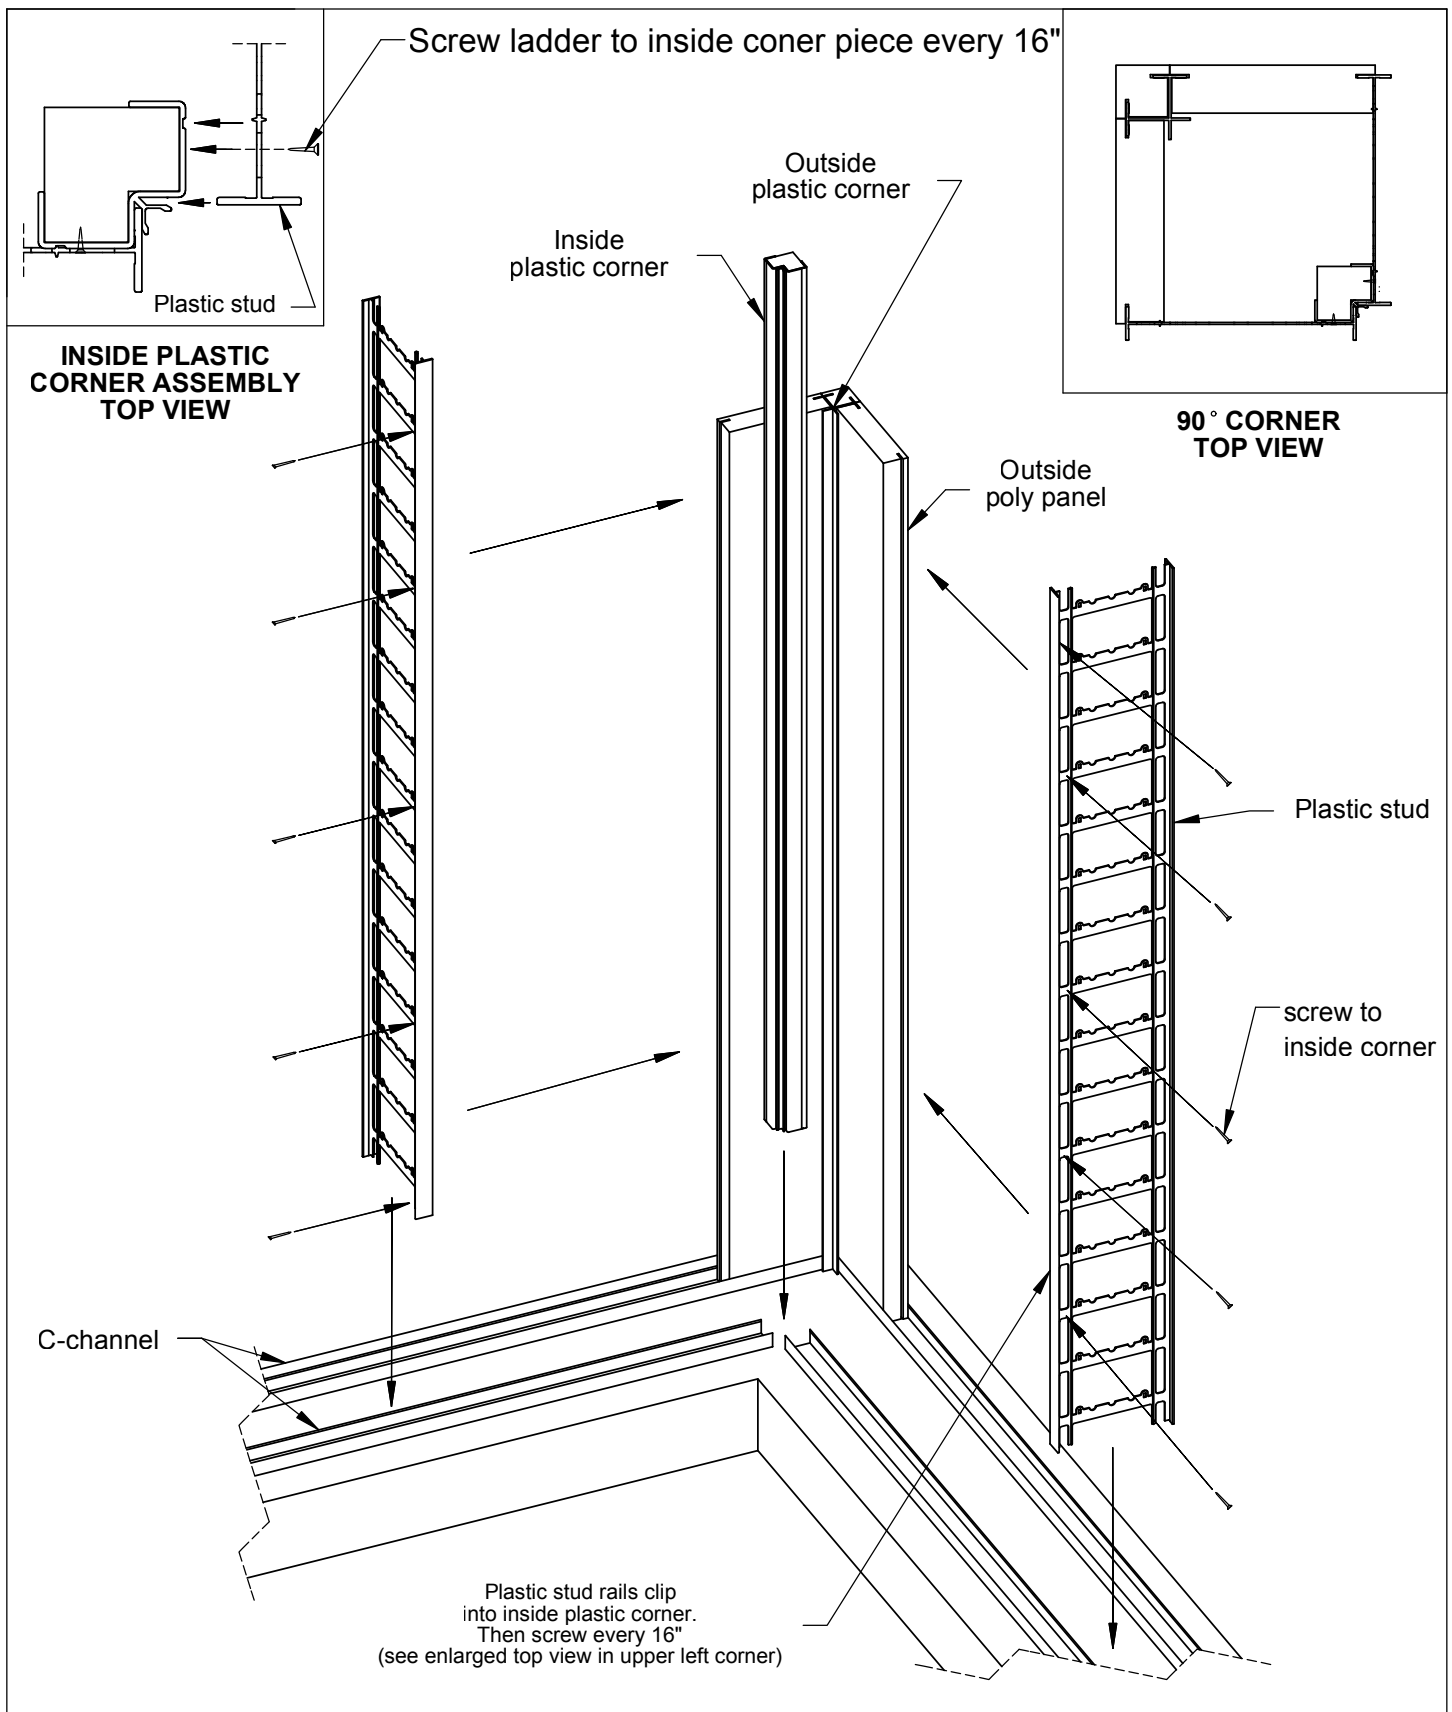


**C-CHANNEL SHOULD BE SECURED TO BOTH THE
PLASTIC STUD AND OUTSIDE PLASTIC CORNER**

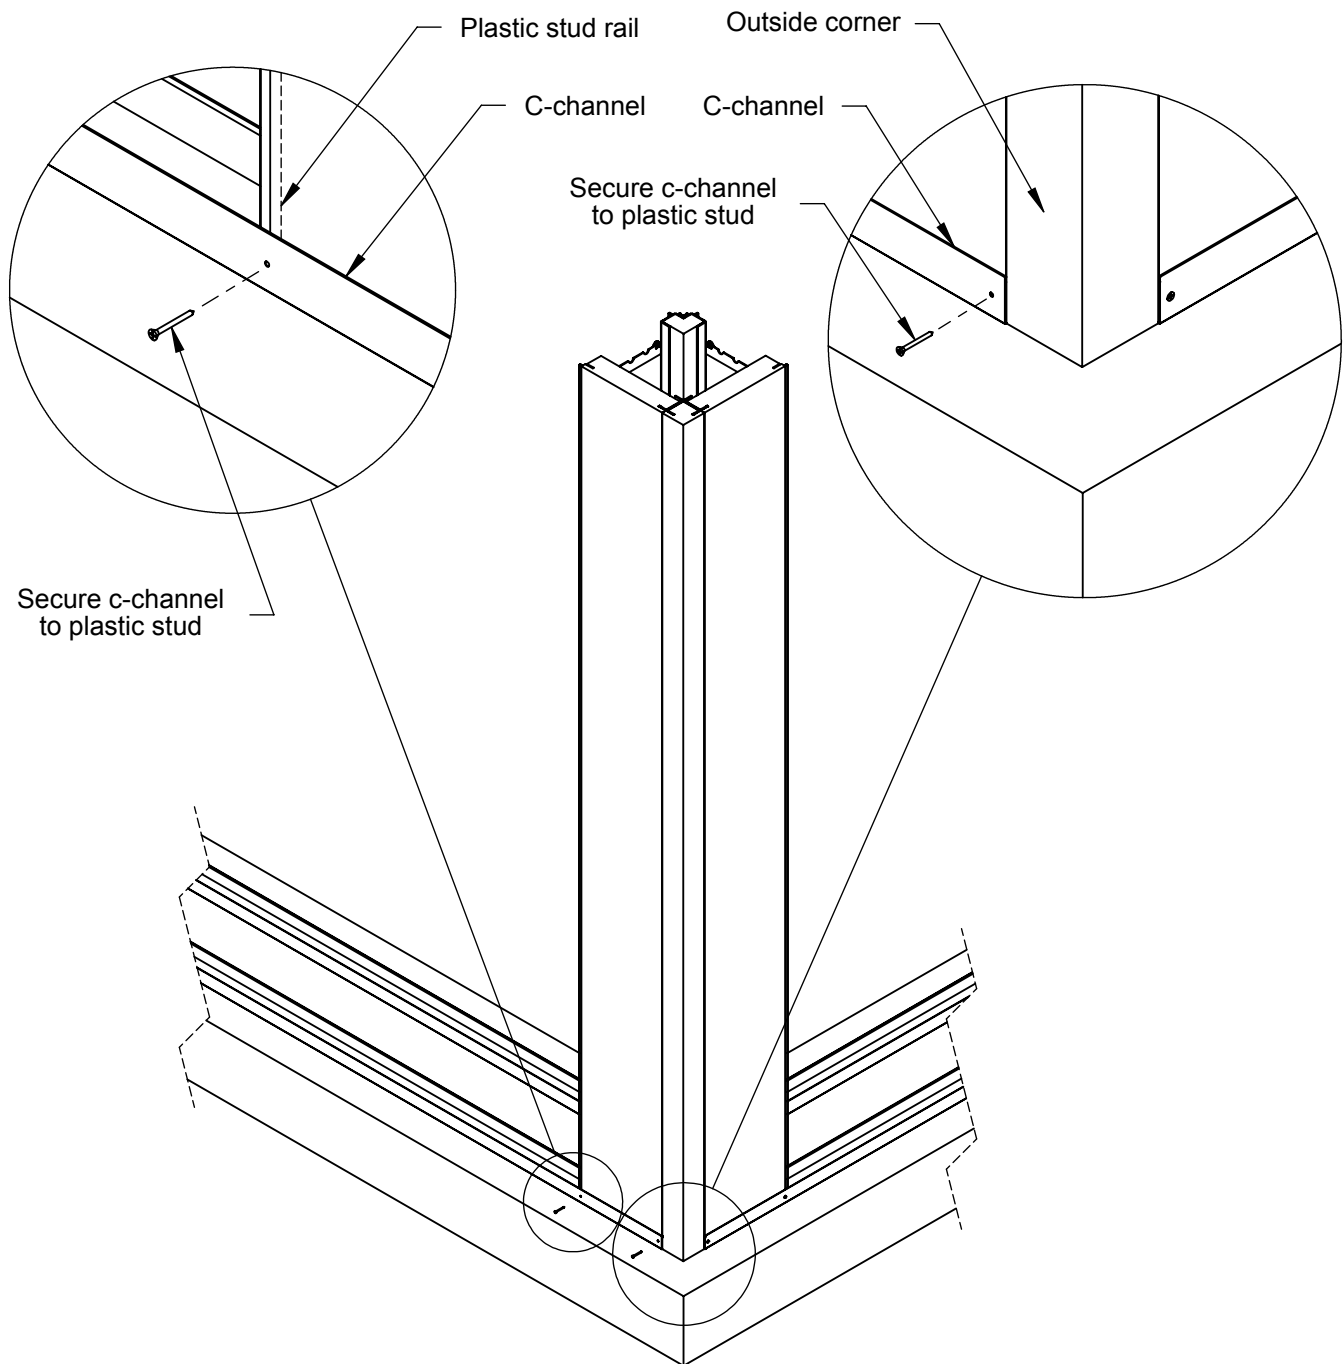

Always follow applicable codes for
rebar configuration and spacing

Install corner rebar as the
corner is being assembled

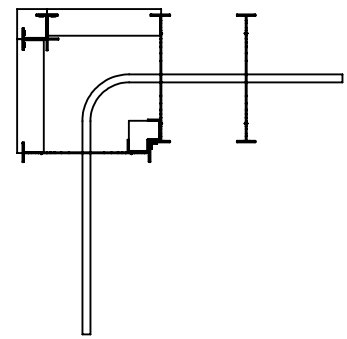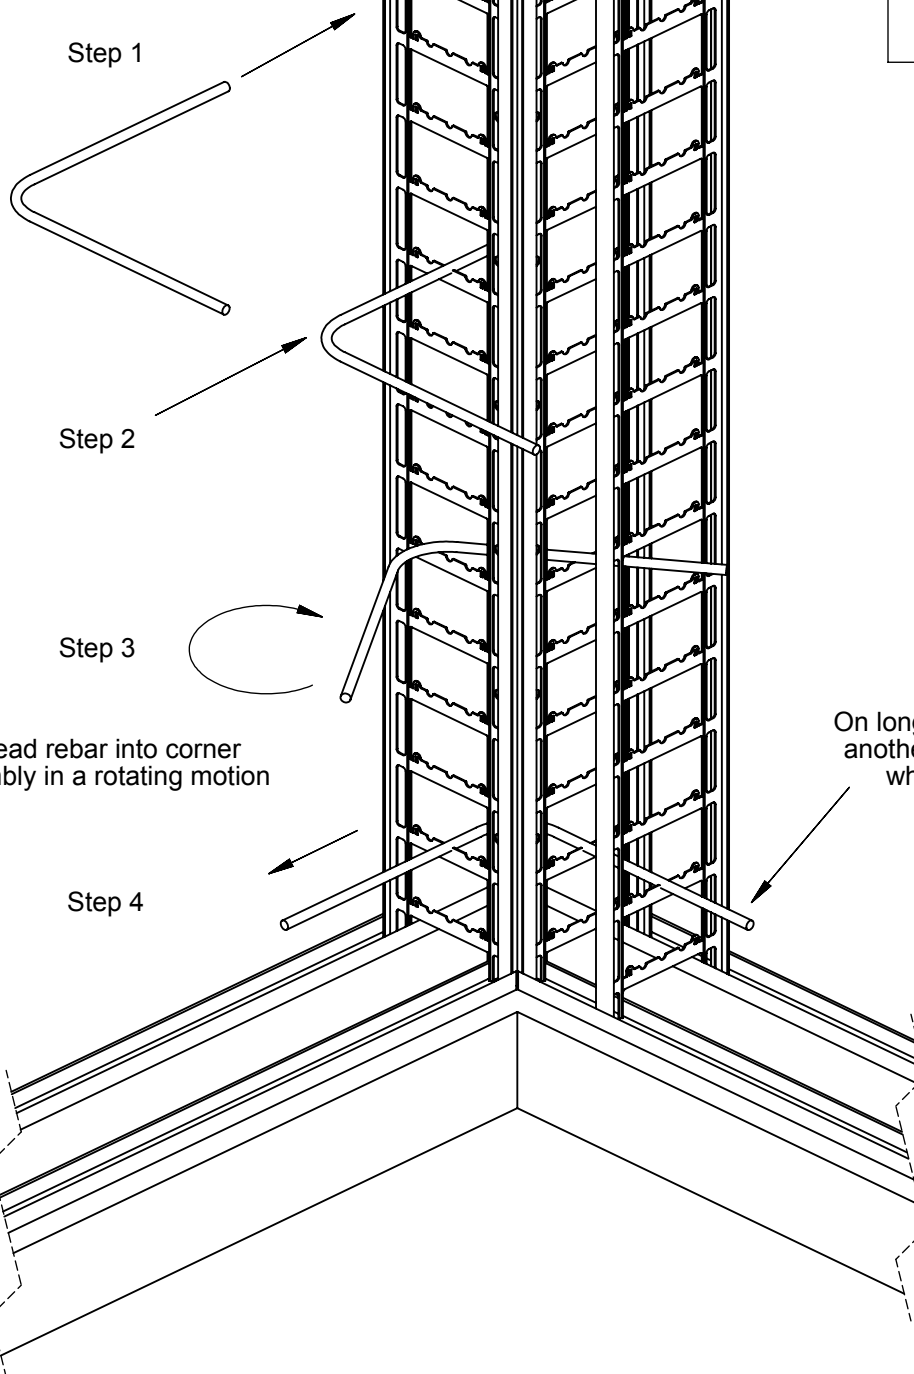

90° CORNER
TOP VIEW