


Panels can be slid up to pour and consolidate walls in lifts  
Top c-channel is installed before final lift is poured

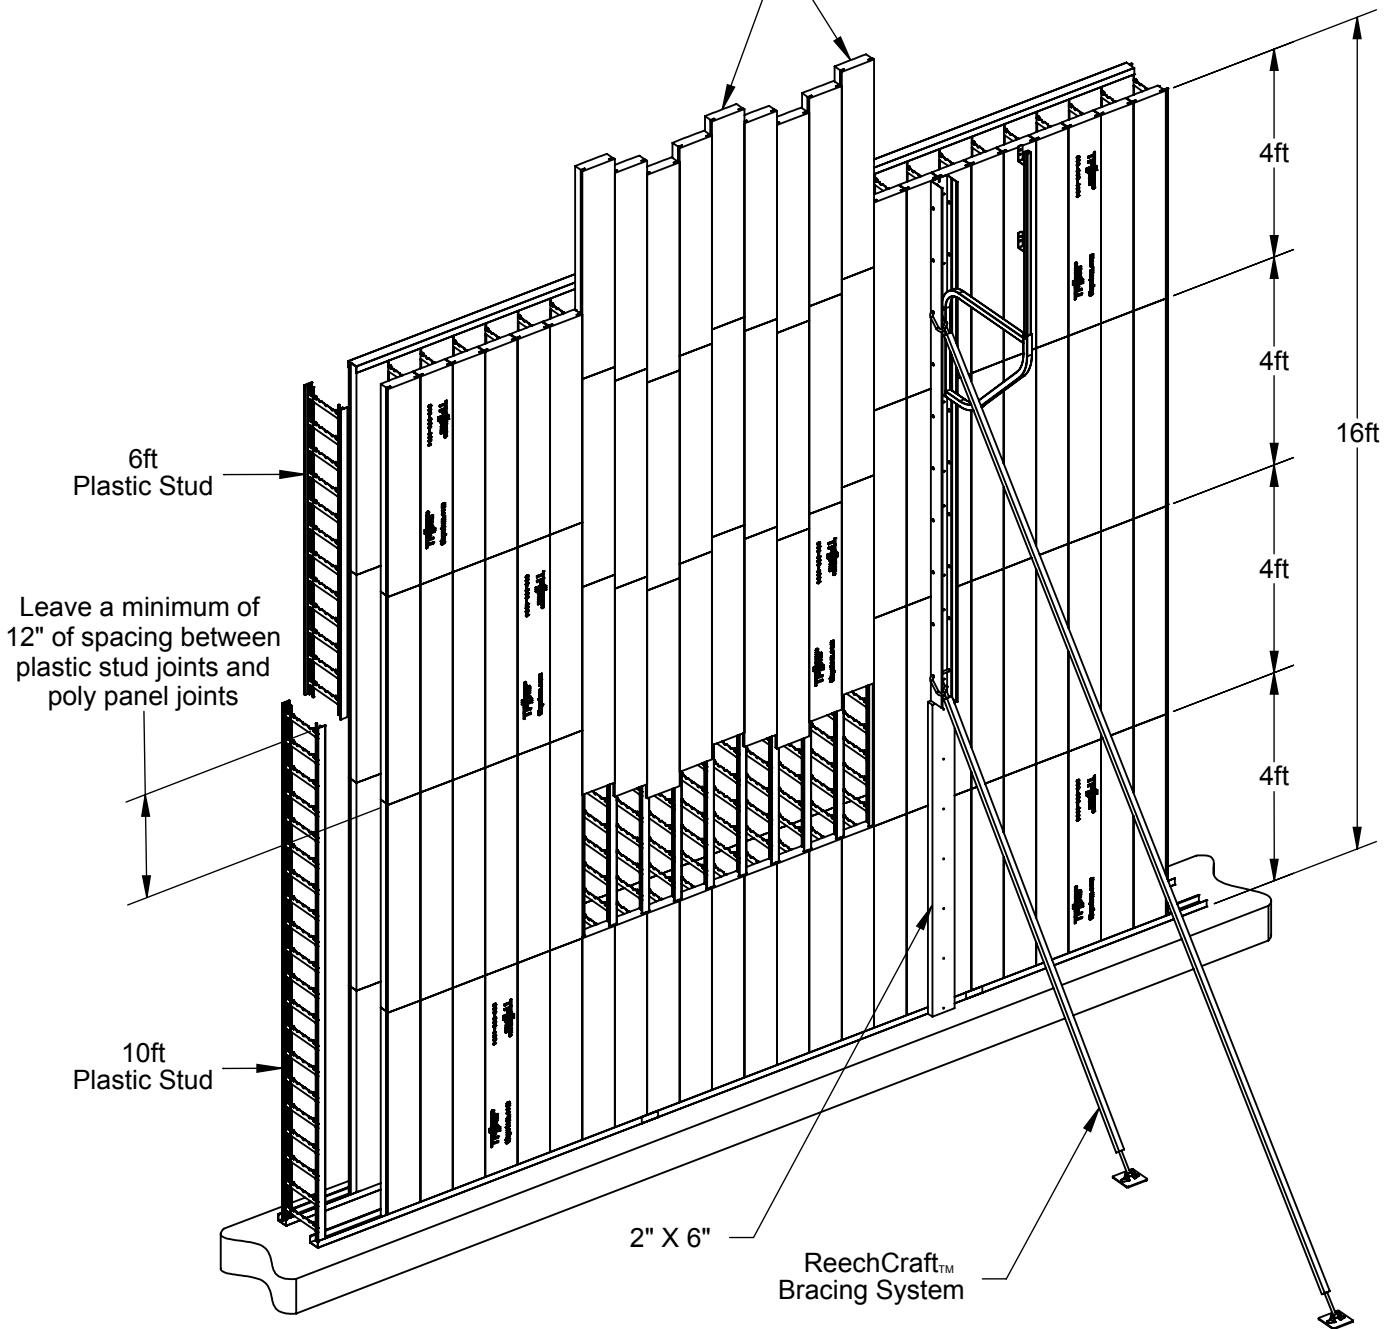

16' Tall Wall Example

ThermoForm System™ components can be stacked to any height provided there is sufficient bracing, for wind and pouring of concrete



Tall Walls

ThermoForm

TF Forming Systems, Inc.  
800-360-4634  
www.TFSystem.com

Date: 4/8/2014